# **QSEG OFFICE PARTITION TRI** QSEG MODULAR SEG DISPLAY PRODUCT CODE: QSEGOFFICE-TP-FCP-G





#### **PRODUCT DESCRIPTION**

Use Qseg for social distancing solutions for work environments as office partitions and cubicles. Help keep safe physical distance between employees and customers with today's health and safety regulations. By strategically placing our lightweight and portable walls. Padded travel bags are included to keep your frames and graphics protected during transport and storage. With many wall sizes and connector accessories. Effortlessly creating numerous configurations that meet your needs. Connector options are either 2 way (90°) or 4 way (180°) Other graphic options are full custom printed dye sublimated graphics or TPU plastic for hygienic sneeze guards and partitions.

41.5"W x 91"H GRAPHIC SIZE (each frame)

**GRAPHIC MATERIAL** 

Dye Sub Stretch Fabric

**GRAPHIC FINISHING** 

Silicone beading sewn onto edge of graphic

#### **DISPLAY CONSTRUCTION**

Aluminum extrusion frame with plastic components

SHIPPING WEIGHTS & DIMENSIONS

Shipping Weight 16 lbs (SEGO-100x225) (6 boxes) (each box)


Shipping Dimensions (each box)

47.25"W x 10.25"H x 10.25"D (6 boxes)

**GRAPHIC TURN AROUND TIME** 

2 business days after proof approval (up to 2 sets)

AVAILABILITY | PFC








CROSS CONNECTION



40 lbs (SEGO-300x225) (6 boxes) 47.25"W x 4"H x 10.25"D (6 boxes)

T CONNECTION



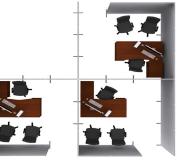






STRAIGHT CONNECTION





# PARTS LIST

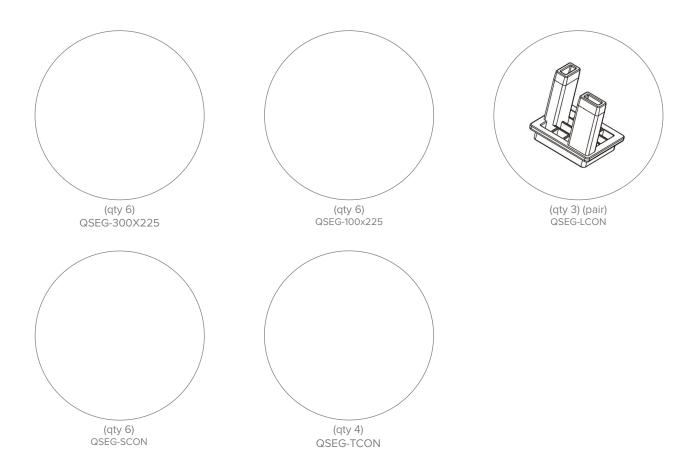


QSEG OFFICE PARTITION TRI QSEG MODULAR SEG DISPLAY PRODUCT CODE: QSEGOFFICE-TP-FCP-G





### SET UP INSTRUCTIONS SINGLE FRAME ASSEMBLY




# SET UP INSTRUCTIONS 3 FRAME CONNECTION (QSEG 9.8 X 7.4FT)

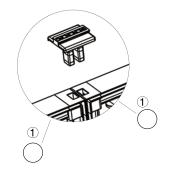

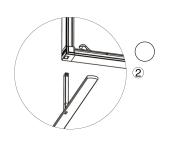

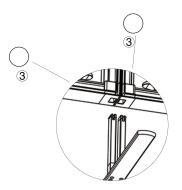

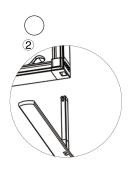


QSEG MODULAR SEG DISPLAY PRODUCT CODE: QSEGOFFICE-TP-FCP-G

**QSEG OFFICE PARTITION TRI** 



### SET UP INSTRUCTIONS OFFICE PARTITION ASSEMBLY

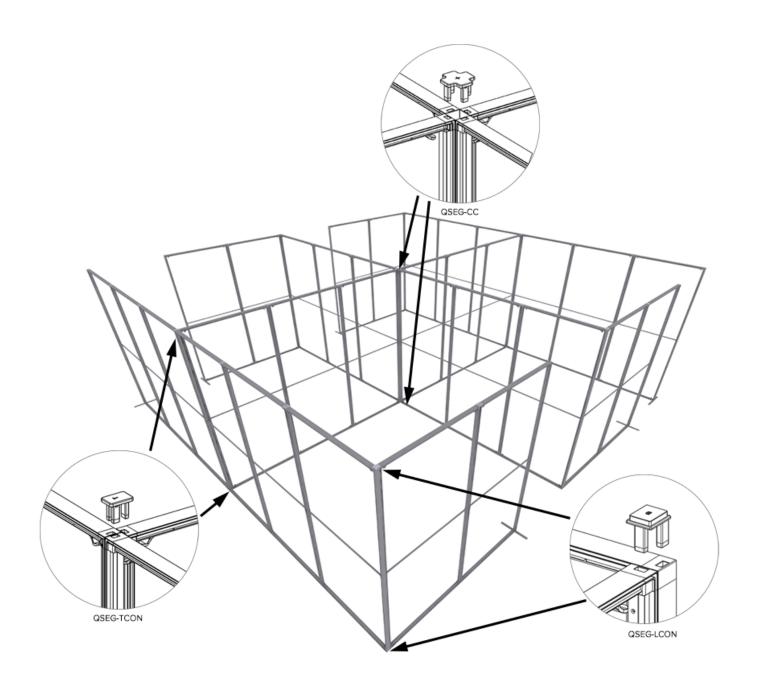




## TEMPLATE





**TEMPLATE GUIDE** 



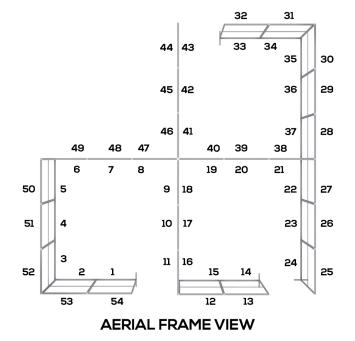

NUMBERS ON THE IMAGE ABOVE INDICATE THE TEMPLATE LOCATION # ON FRAME PLEASE ADD TEMPLATE LOCATION # TO END OF FILENAME. EX: "QSEG-OFFICEPARTITION-TRI-1"